Start

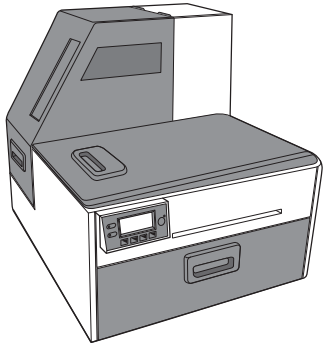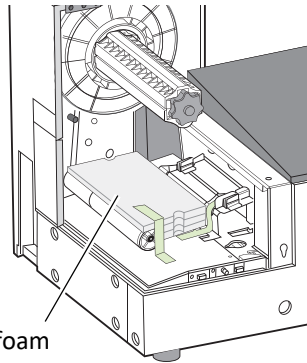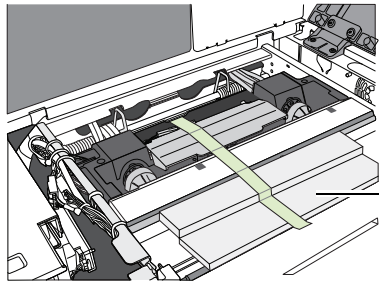**NOTE:** Please ask your reseller for the printer driver software.

1 Remove tape and packing materials

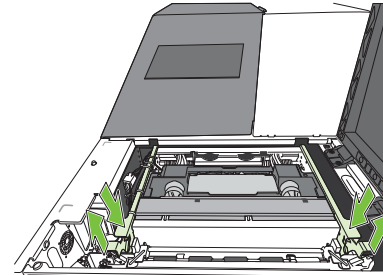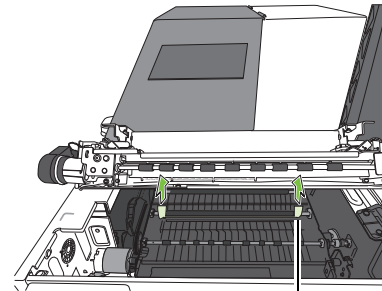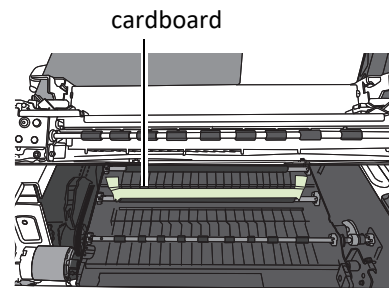**a** Remove tapes
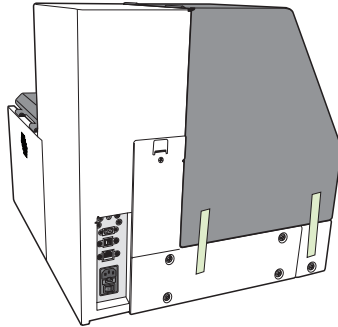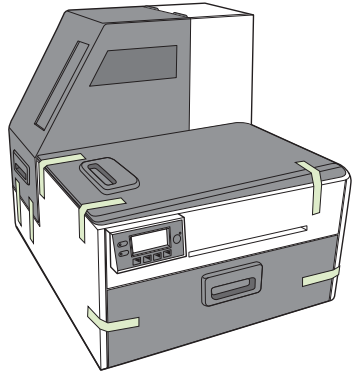
b Remove tapes and foam

foam

c Remove cardboard

squeeze latches to open clamshell

pull tabs

cardboard

2 Connect power

b

a

c

Choose display language

After connecting power for the first time, press Config to set the display language for the control panel.

a

b
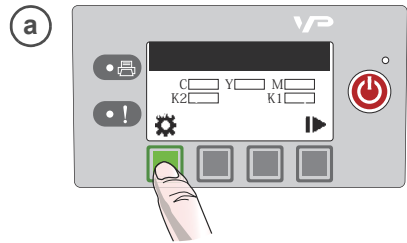
LANGUAGE
1. English ✓

For other languages, press ▲, ▼
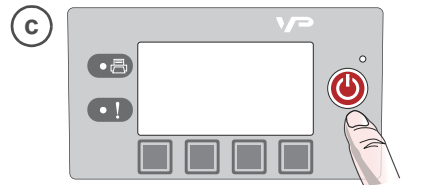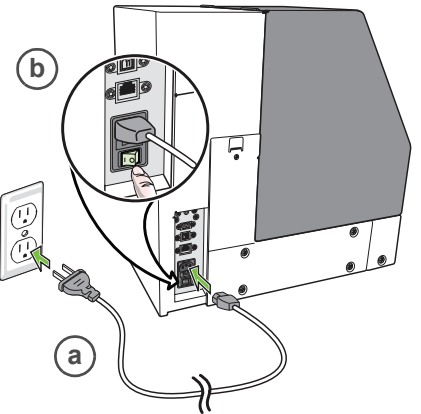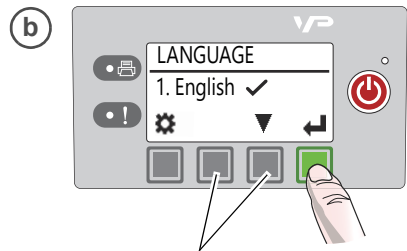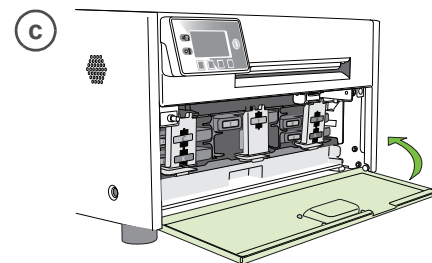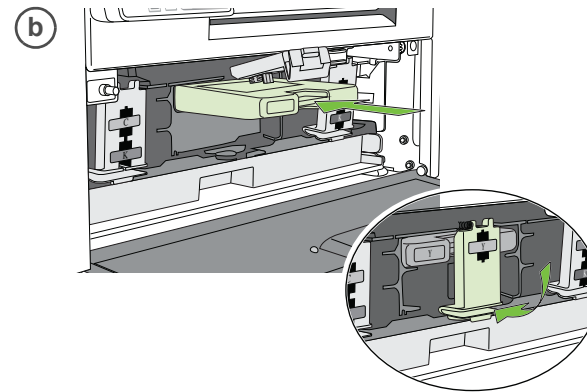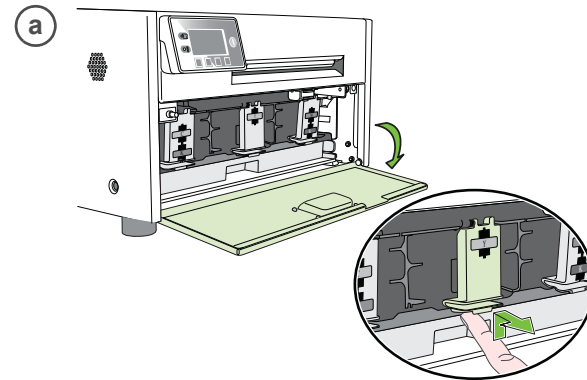
c

LANGUAGE
1. English ✓

(Return)
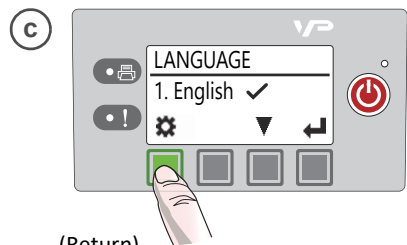
3 Install ink cartridges

a

b

c

4 Install printhead

a

b

Missing Printhead
C Y M
K2 K1

(Config)

CONFIGURATION
3. PRINTHEAD

(Select)
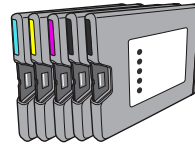
PRINTHEAD
2. REPLACE
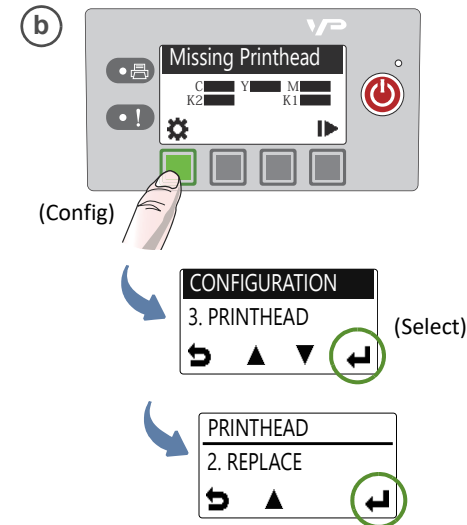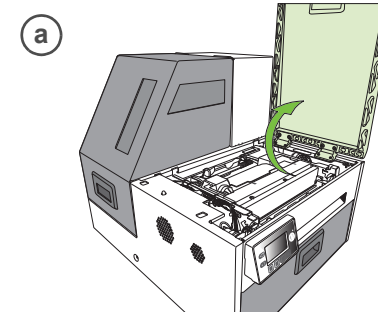
⚠ Wait for printhead latch to be released.

c Open printhead latch fully

d Remove caps

e Remove printhead from packaging

ink couplings

NOTE: Keep the orange cover. You will need it to cap the printhead if it is removed from the printer.

⚠️ Do not touch the ink couplings, electrical contacts, or nozzles.

electrical contacts

No less than 45°

nozzles

f

5 Load media

a

b

g

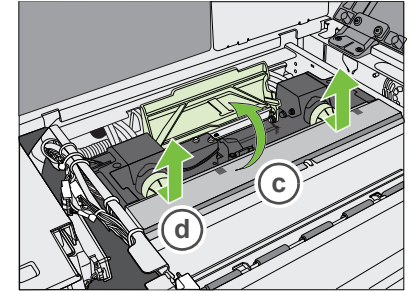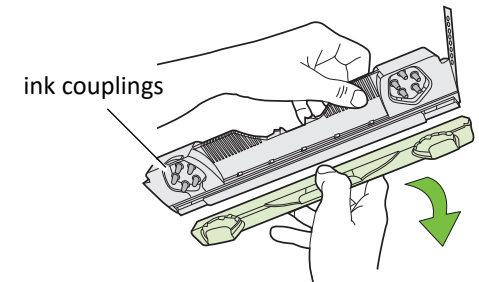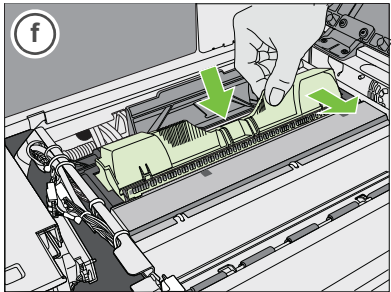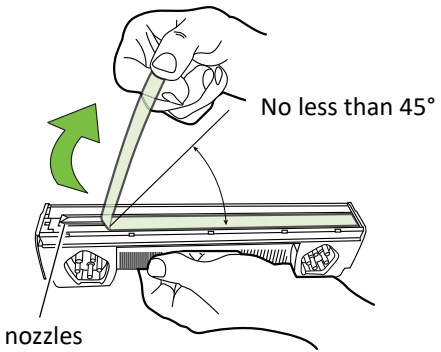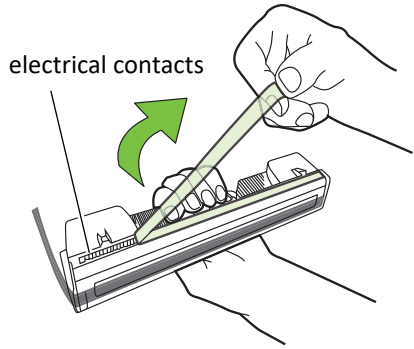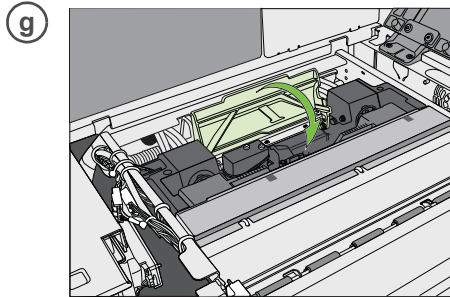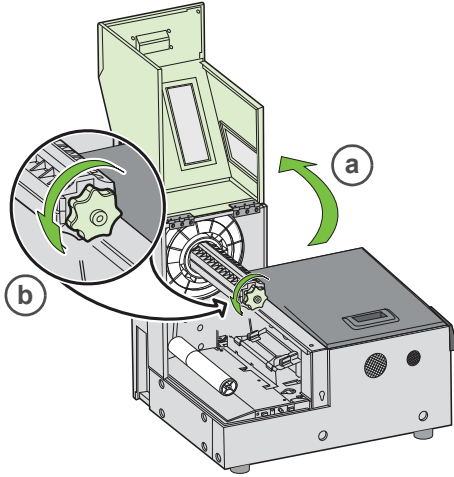Check that ink is flowing through the tubes on both sides of the printhead.

h

c

d

Push media roll against inner guide.

Flat side against media roll

e

Tighten knob fully

f
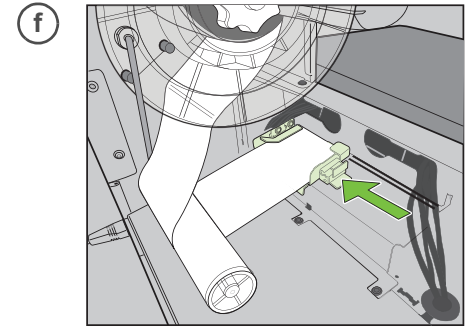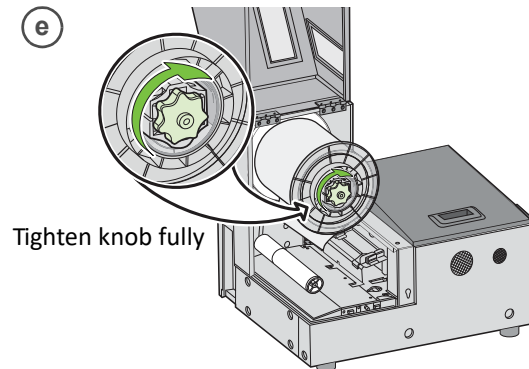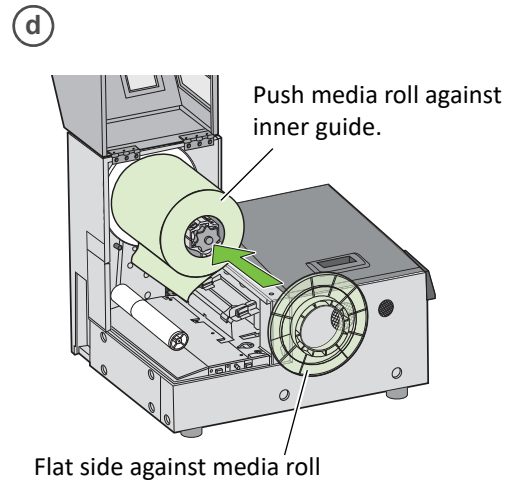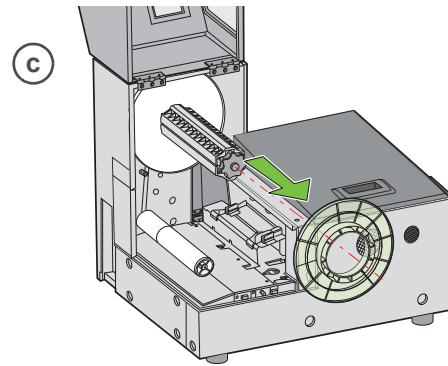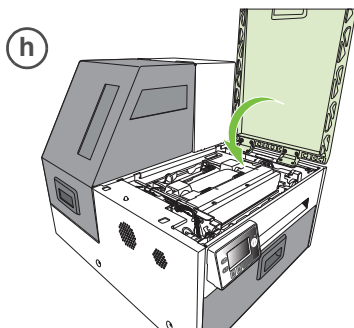
Insert media till it stops.
Wait for printer to load media.

g
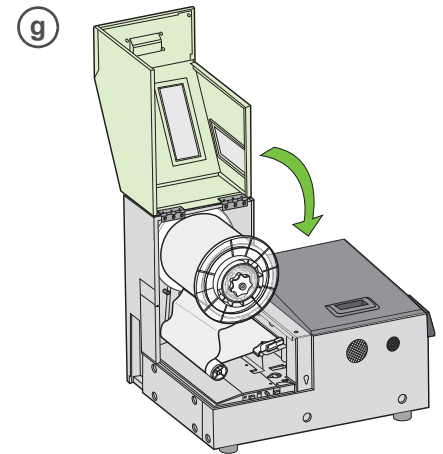
6 Print test label

Load 4" x 4" or larger labels (with inter-label gap or continuous). If using continuous stock, set Media Layout to Continuous in the EWS Diagnostics page.

(Config)

CONFIGURATION
2. MAINTENANCE   (Select)

MAINTENANCE
1. PRINT TEST PAGE

PRINT TEST PAGE
2. PQ PLOT

Sample PQ plot

Verify the following on the PQ plot:

1
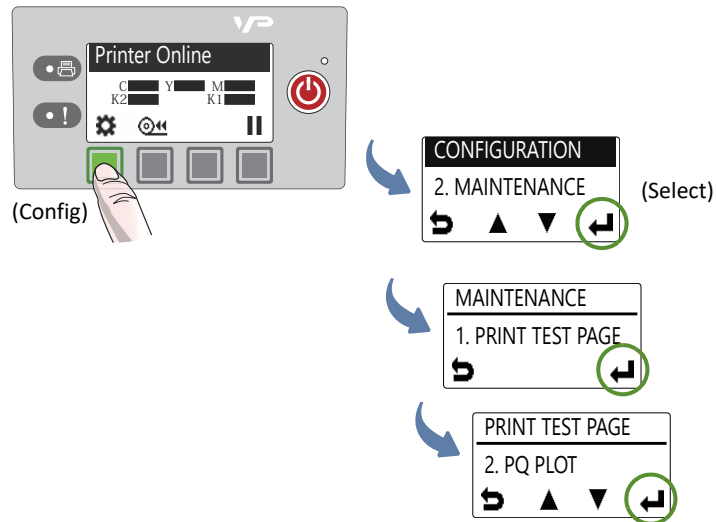- Lines are printed in the order yellow, black, cyan, black and magenta.
- Lines are clearly defined with no white dots or streaks.
- Vertical dashed lines are straight.

2
- Bars are printed in the order yellow, black, cyan, black and magenta.
- Bars are clearly defined with no white dots or streaks.
- No color mixing in the bars.

3
- Text is sharp, crisp, and legible.

4
- Lines are printed in the order yellow, black, cyan, black and magenta.
- Lines are clearly defined with no white dots or streaks.

7 Install printer driver

To connect printer to computer

a

b

c

d Connect USB cable when prompted

VP7xx   Computer

USB
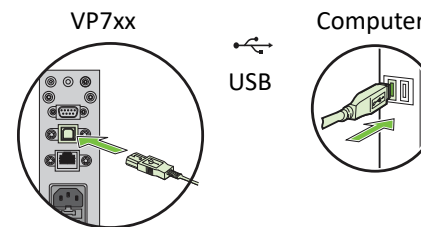
To connect printer to network

DHCP is enabled by default. If it is not available, see "Additional Networking Information".

a   VP7xx   Network

Network

b

c

d